

AKAI

LED TELEVISION (FULL HD) WITH
BUILT-IN DVB-T/-C TUNER (H.264)

AL2415TC



User manual
Brugsanvisning

P1-P17

P18-P37

Table Of Contents

Table of Contents	1
Important Safety Instruction	2
Warnings and Cautions	3
Functional Parts(TV)	4
Rear View Of TV Set	5
Operation-Remote Control	6
Select Input Source	7
Basic Operation	7
ATV Source	8-10
Other Source	11
PC Source	11
DTV Source	11-12
USB Source	12
PVR Source	13-15
Troubleshooting Tips	16

Important Safety Instruction



WARNING

RISK OF ELECTRIC SHOCK
DO NOT OPEN



WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER OR BACK. NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The lightning flash with arrow head within a triangle is intended to tell the user that parts inside the product are a risk of electric shock to persons.



The exclamation point within a triangle is intended to tell the user that important operating and servicing instructions are in the papers with the appliance.


WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT EXPOSE THIS APPARATUS TO RAIN OR MOISTURE AND OBJECTS FILLED WITH LIQUIDS, SUCH AS VASES, SHOULD NOT BE PLACED ON THIS APPARATUS.

Warnings And Cautions




Caution

Do not drop or push objects into the television cabinet slots or openings. Never spill any kind of liquid on the television receiver.

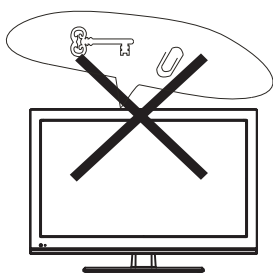


Caution

Do not insert anything in the ventilation holes. If metal or something flammable enters, it may result in fire or electric shock.

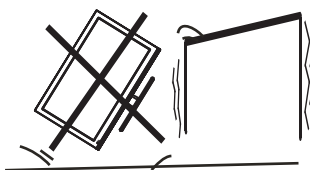


Caution

Do not place your television on an unstable cart, stand, shelf or table. Serious injury to an individual, and damage to the television, may result if it should fall.

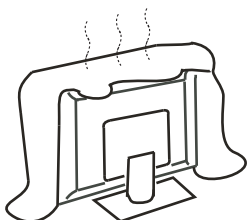

Caution

Do not block the ventilation holes in the back cover. Adequate ventilation is essential to prevent failure of electrical component.

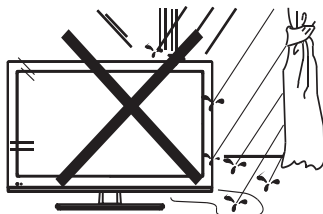


Warning

To prevent fire or electrical shock hazard, Do not expose the television receiver to rain or moisture.

Functional Parts(TV)

Front View of LED Set

1. Remote Sensor
2. LED indicator lamp

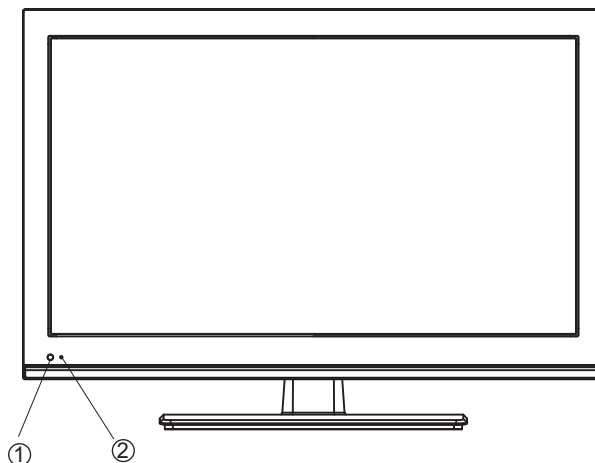

To turn the TV power ON

Put the TV set on the correct place, then connect the DC plug of the AC-DC adaptor to the DC 12V socket at the back of the TV set. Connect the adaptor main cord to the wall outlet, then the LED indicator lamp turns red/blue and the TV set is at Standby/work Mode. At Standby Mode, if Standby Button is pressed the power indicator will change to blue. It will flash a few seconds before the picture appears.

To turn the TV power OFF

Press the Standby Button to make the TV set in Standby Mode, then disconnect the power plug from the wall outlet.


NOTE:

If TV is the selected input without signal received and NO operation is performed for about 5 minutes continuously, the TV set will enter standby mode. For any inputs other than TV, the TV set will not enter standby mode automatically without users instruction. If you are not going to use this TV set for a long time, switch off the set and disconnect the power plug from the wall outlet.

Rear View Of TV Set

Back View of LED Set

1. Standby Button
2. SOURCE Button
- MENU Button
3. P+ Button
- P- Button
4. V+ Button
- V- Button

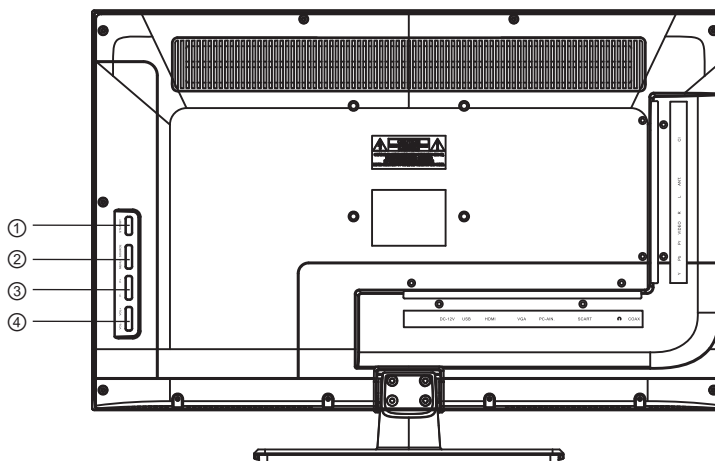

NOTE:

Precautions when connecting to other equipment.

When using external equipment with this TV set, please read the instruction manual of the external equipment.

Switch off all power supplies to the equipment and TV set before connection.

Always ensure that the input and output terminals are correctly connected.

The UPDATE terminals just use to update the system software.

Operation-Remote Control



STANDBY: Switch on LED TV when at standby mode.

AUTO: Press to do auto configuration directly in PC source.

MUTE: Press to mute the sound. Press again or press VOL+ to unmute.

0-9: Press 0-9 to select a TV channel directly when you are watching TV. To enter page number in teletext mode and so on.

-/-- : Press this button to enter a program number with different digits. eg. - for 1, -- for 11, --- for 111, ---- for 1111.

↺ : Returns to the previously viewed programme.

CH+/- : Press to scan through or to select a channel.

VOL+/- : Press to increase / decrease the sound level.

ASPECT: To select the aspect of screen.

NICAM: Change audio mode in ATV source: Stereo/ Dual I/II/Mono. Change audio mode in other source: Left/Right.

DISPLAY: Press to display the source and channel's information.

▼ / ▲ / ◀ / ▶ / OK: Allows you to navigate the on-screen menus and adjust the system settings to your preference.

MENU: Brings up the LED main menu to the screen in TV mode.

EXIT: Press EXIT to exit menu or sub menu.

SOURCE: Press to select the input source.

P.MODE: Press repeatedly to cycle through the available video picture modes.

S.MODE: Press to cycle through the different sound settings.

SLEEP: Let you select amount of time before your TV turn itself off automatically.

FAV: Press to display FAV menu in TV mode.

FAV+/- : Press to select the channel in fav channel.

EPG: Press to show the Electronic Program Guide menu.

TEXT: Switch On or Off the teletext mode.

HOLD: Hold On or Off for current page display.

TV/RADIO: Press to select TV or RADIO mode.

SUBTITLE: To switch the dialogue at the bottom of the screen.

INDEX: INDEX request the index page.

REVEAL: Press REVEAL to reveal or hidden the hidden words.

SUBPAGE: Press SUBPAGE to sub coded page access.

LANG: To show the list of audio languages available for the current channel.

⏮ : Play/pause or begin to timeshift.

■ : Stop recording

⏮ : Press to go to the previous chapter.

⏭ : Press to go to the next chapter.

⏮ : Press to timeshift or play a program in fast rewind mode.

⏭ : Play a program in fast forward mode.

● : To begin recording.


RED/ GREEN/ YELLOW/ BLUE: Navigation buttons in TV mode.

SELECT INPUT SOURCE

- Press **SOURCE** button to display the input source list;
- Press **▼ / ▲** button to select the input source you want to watch;
- Press **OK** button to enter the selected source;

DTV
ATV
AV
SCART
YPBPR
PC
HDMI
USB

BASIC OPERATION

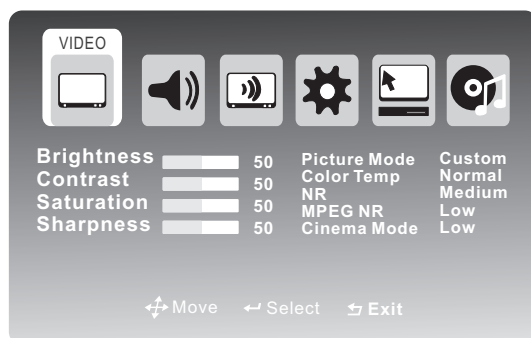

- Press **MENU** button to display the **MAIN OSD MENU**;
- Press **◀ / ▶** button to select the MENU you want to adjust;
- Press **OK** button or **▼** button to enter the sub menu;
- Press **▼ / ▲** button to select the entry, then press **OK** button to enter and press **◀ / ▶** to adjust the value of selected entries;
- You can press **MENU** or **EXIT** button to save and return back to the previous menu .

Setup Wizard

There are Setup Wizard operations if the TV system is first time opened.

Setup Wizard(1)

Press **▼ / ▲** button to select the Language that you want to choose.
Press **OK** button to choose and enter the next step;
Press **▶** button to select **Cancel**. Choose Yes, there will be Setup Wizard operations when open the TV next time.

Setup Wizard(2)

Press **▼ / ▲** button to select the Country that you want to choose.
Press **OK** button to choose and enter the next step;
Press **▶** button to select **Previous** or **Cancel**, and press **OK** button to confirm the selection;

Setup Wizard(3)


Press **OK** button to start Auto Scan;
Press **▼** button to the bottom line ,then press **◀ / ▶** button to select Previous or Cancel.

Setup Wizard(4)

Press Key MENU or EXIT to stop searching

ATV Source


Video Menu

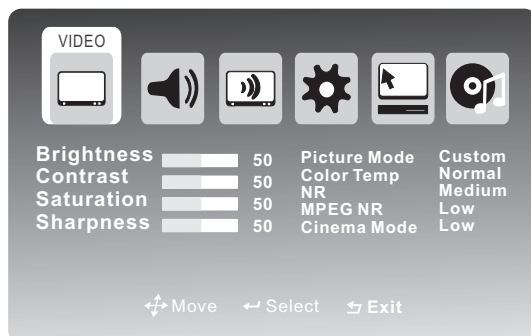

Press ▼ / ▲ / ◀ / ▶ button to select **Brightness/Contrast/Saturation/Sharpness**, then press **OK** button to enter and press ◀ / ▶ button to adjust.

Press ▼ / ▲ / ◀ / ▶ button to select **Picture Mode/Color Temp/NR/MPEG NR/Cinema**, then press **OK** button to enter and press ▼ / ▲ button to select which mode you want.


Audio Menu

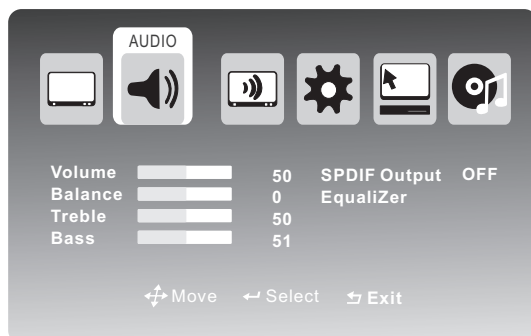

Press ▼ / ▲ / ◀ / ▶ button to select **Volume/Balance/Treble/Bass/ SPDIF**, then press **OK** button to enter and press ◀ / ▶ button to adjust.

Press ▼ / ▲ / ◀ / ▶ button to select **SPDIF output/Equalizer**, then press **OK** button to enter and Press ▼ / ▲ button to select the Mode of **SPDIF output** or **Equalizer**.

TV MENU

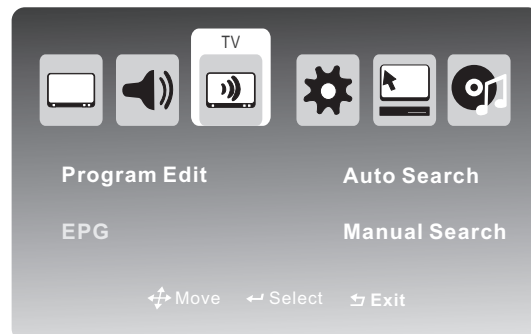

Program Edit: Press ▼ / ▲ / ◀ / ▶ button to select **Program Table**, then press **OK** button to enter.

Service Type: Press ▼ / ▲ / ◀ / ▶ button to select **Service Type**, then press **OK** button to enter and press **OK** button to adjust.

Network: Press ▼ / ▲ / ◀ / ▶ button to select **Network**, then press **OK** button to enter and press **OK** button to select All, Rowridge, Crystal Palace, Digital Finland, Winter Hill.

Press **RED** button on the remote control to rename the program. Press ▼ / ▲ button to select different characters.
Press **GREEN** button to delete the program you don't want to remain.
Press **YELLOW** button to change the places of the two programs.
Press **BLUE** button to move the program to the new place.

FAV: Press ▼ / ▲ button to select you want to make it a favorite channel, then press ▶ button to select fav and press **OK** button to confirm, press **OK** button again will set it to a normal channel.

ATV Source

Lock: Press ▼ / ▲ button to select you want to lock channel, then press ► button to select lock and press **OK** button to confirm. press **OK** button again to cancel channel lock.

Skip: Press ▼ / ▲ button to select you want to skip channel, then press ► button to select skip and press **OK** button to confirm.press **OK** button again to cancel skip channel.

Auto Search : Press ▼ / ▲ / ◀ / ▶ button to select **Auto Search**, then press **OK** button to enter. Press ▼ / ▲ button to select **Analog(or ATV)**, then press **OK** button to start search.Press ▼ / ▲ button to select

Digital, then press **OK** button to enter.

DVB-T: Press ▼ / ▲ button to select **Aerial(or DTV)**, then press **OK** button to start searching DVB-T.

DVB-C: Press ▼ / ▲ button to select **Cable**, then press **OK** button to set the information of DVB-C Searching.

Network ID: Press ▼ / ▲ / ◀ / ▶ button to select **Network ID**, then press **OK** button to enter. Press ◀ / ▶ button to select Auto or press the number button to set the ID by yourself, then press **OK** button to confirm the setting and back to the previous menu.

Frequency: Press ▼ / ▲ / ◀ / ▶ button to select **Frequency**, then press **OK** button to enter. Press ◀ / ▶ button to select Auto or press the number button to set the Frequency by yourself, then press **OK** button to confirm the setting and back to the previous menu.

Symbol Rate: Press ▼ / ▲ / ◀ / ▶ button to select **Symbol Rate**, then press **OK** button to enter. Press ◀ / ▶ button to select Auto or press the number button to set the Symbol Rate by yourself, then press **OK** button to confirm the setting and back to the previous menu.

Demodulation: Press ▼ / ▲ / ◀ / ▶ button to select **Demodulation**, then press **OK** button to enter.

Press ▼ / ▲ button to select **Auto \16QAM\64QAM\128QAM\256QAM**. then press **OK** button to confirm the setting and back to the previous menu.

Service Type: Press ▼ / ▲ / ◀ / ▶ button to select **Service Type**, then press **OK** button to enter. Press ▼ / ▲ button to select **All Services** or **Free Services**.then press **OK** button to confirm the setting and back to the previous menu.

Scan Type: Press ▼ / ▲ / ◀ / ▶ button to select **Scan Type**, then press **OK** button to enter.

Press ▼ / ▲ button to select **Quick Scan** or **Full Scan**. then press **OK** button to confirm the setting and back to the revious menu. Press ▼ / ▲ button to select **Start**, Press **Start** to search. After setting the above information,Press ▼ / ▲ button to select **Start**, Press **Start** to search.

Manual Search: Press ▼ / ▲ / ◀ / ▶ button to select **Manual Search**, then press **OK** button to enter.

Channel No.: Press ◀ / ▶ button to select **Channel No.**, then press ▼ / ▲ button to adjust.


Color System : Press ◀ / ▶ button to select **Color System**, then press ▼ / ▲ button to select **Auto, SECAM, PAL**.

Sound System: Press ◀ / ▶ button to select **Sound System**, then press ▼ / ▲ button to select B/G, L/L' , D/K, I.

AFT: Press ◀ / ▶ button to select **AFT**, then press ▼ / ▲ button to select **On** or **Off**.

Frequency: Press ◀ / ▶ button to select **Frequency**, then press ▼ / ▲ button to adjust.


SETUP MENU

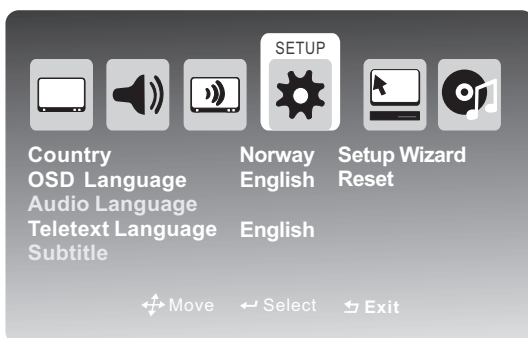

Press ▼ / ▲ / ◀ / ▶ button to select **Country/OSD Language/Teletext Language**, then press **OK** button to enter and press ▼ / ▲ button to select. Press ▼ / ▲ / ◀ / ▶ button to select **Reset/Setup Wizard**, then press **OK** button to enter and press ▼ / ▲ button to select **Yes** or **No**.

ATV Source

TIME MENU

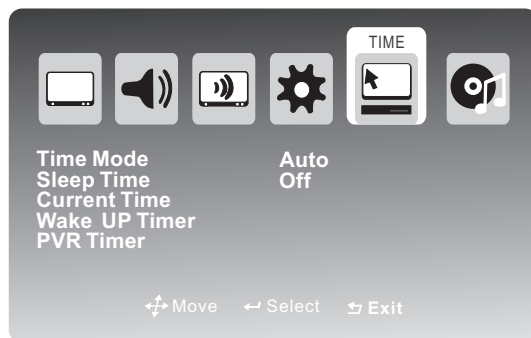


Press ▼ / ▲ button to select **Time Mode/Sleep Time/Current Time**, then press **OK** button to enter and press ▼ / ▲ button to select Auto or Manual.

Date: Press ◀ / ▶ button to select year, then press ▼ / ▲ button to choose the year of current time, Chooses the month and the day with the similar method.

Time: Press ◀ / ▶ button to select hour, then press ▼ / ▲ button to choose the hour of current time, Chooses the minute with the similar method.

NOTE: Only when you set the Time Mode "Manual", you can set the Current Time.

OTHERS MENU

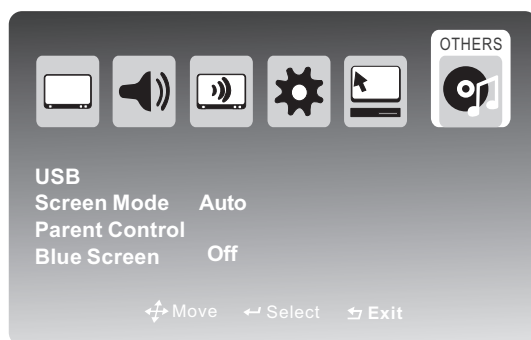

Press ▼ / ▲ / ◀ / ▶ button to select **USB/SLOT/Partition**, then press **OK** button to enter.

Press ▼ / ▲ / ◀ / ▶ button to select **Select**, then press **OK** button to enter.

Press ▼ / ▲ / ◀ / ▶ button to select **All**, then Press ◀ / ▶ / ▼ / ▲ button to select the program you want to play.

Press ▼ / ▲ / ◀ / ▶ button to select **Picture/Music/Movie**, then Press ◀ / ▶ / ▼ / ▲ button to select the picture you want to look. Press **OK** button to enter the picture/song/Movie you have selected.

Format: Press ▼ / ▲ / ◀ / ▶ button to select **Format**, then press **OK** button to enter.

Press **OK** button to select **FAT32, EXT3 or EXT2**. After the designation, press ▼ / ▲ button to select **OK** button, will demonstrate the following dialog box.

Press ◀ / ▶ button to select **Yes**, then press **OK** button to format the device, otherwise cancels the formatting. For more information please refer to USB channel.

Screen Mode: Press ▼ / ▲ / ◀ / ▶ button to select **Screen Mode**.

Parental Control: Press ▼ / ▲ / ◀ / ▶ button to select **Parental Control**, then press **OK** button to enter. Input password to enter, default password is "8888"

Parental Lock: Press ▼ / ▲ / ◀ / ▶ button to select **Parental Lock**, then press **OK** button to enter and press ▼ / ▲ button to select Off or On. When parental lock is at the "off" state, does not need to input the password to enter the parental control menu directly.

Parental Rating: Press ▼ / ▲ / ◀ / ▶ button to select **Parental Rating**, then press **OK** button to enter and press ▼ / ▲ button to select between 3 and 18.

Change PIN: Press ▼ / ▲ / ◀ / ▶ button to select **Change PIN**, then press **OK** button to enter.

After inputting the old password, will demonstrate that inputs the new password dialog box. Input your new password.

After inputting the new password, will demonstrate the confirmation password dialog box. Input your new password again. After inputting the confirm password, will demonstrate "Password Changed!"

Blue Screen: Press ▼ / ▲ / ◀ / ▶ button to select **Blue Screen**, then press **OK** button to enter and press ▼ / ▲ button to select Off or On.

OTHER Source


AV/YPBPR/HDMI/SCART

Notes:

- 1.Video / Audio / Setup / Time menu and description are the same with the ATV source.
- 2.AV/YPBPR/HDMI/SCART Source non-TV menu.

PC Source

PC MENU

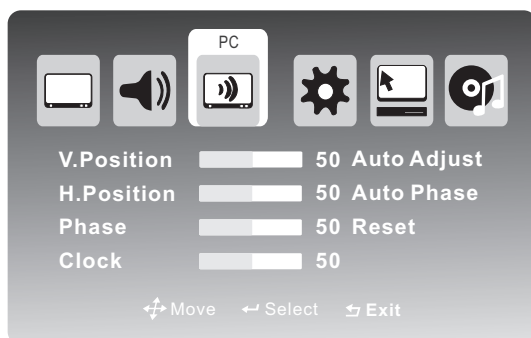

Press ▼ / ▲ / ◀ / ▶ button to select **V.Position/H.Position/Phase/Clock**, then press **OK** button to enter and press ◀ / ▶ button to adjust.

Press ▼ / ▲ / ◀ / ▶ button to select Auto Adjust/Auto Phase, then press **OK** button to auto adjust V.Position and H.Position.

Reset: Press ▼ / ▲ / ◀ / ▶ button to select **Reset**, then press **OK** button to return to factory settings.

Notes:

- 1.Video / Audio / Setup / Time menu and description are the same with the ATV source.
- 2.Others menu and description are the same with the ATV source.

DTV Source

DTV MENU




EPG: Press ▼ / ▲ / ◀ / ▶ button to select **EPG**, then press **OK** button to enter. Press ▼ / ▲ / ◀ / ▶ button to select **program**, then press **OK** button to remind, there will be a icon right of the program's name.

Auto Search: Press ▼ / ▲ / ◀ / ▶ button to select **Auto Search**, then press **OK** button to enter.

Manual Search: Press ▼ / ▲ / ◀ / ▶ button to select **Manual Search**, then press **OK** button to enter.

DTV Source

SETUP MENU

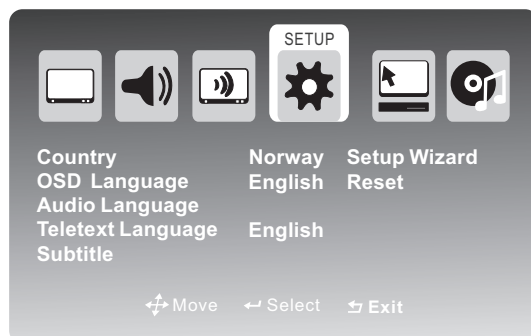

Audio Language: Press ▼ / ▲ / ◀ / ▶ button to select **Audio Language/Teletext Language**, then press **OK** button to enter and press ▼ / ▲ button to choose.

Subtitle: Press ▼ / ▲ / ◀ / ▶ button to select **Subtitle**, then press **OK** button to enter.

Subtitle: Press ▼ / ▲ / ◀ / ▶ button to select **Subtitle**, then press **OK** button to enter and press ▼ / ▲ button to choose On or Off.

Notes:

1. Press **SUBTITLE** button on the remote control to enter and press ▼ / ▲ button to choose On or Off.
2. When subtitle is at "Off" state, the subtitle mode and subtitle language show gray, will not be available.

Subtitle Mode: Press ▼ / ▲ / ◀ / ▶ button to select **Subtitle Mode**, then press **OK** button to enter and press ▼ / ▲ button to choose Normal or Hard of Hearing.

Subtitle Language: Press ▼ / ▲ / ◀ / ▶ button to select **Subtitle Language/Alt.Language1/2/3**, then press **OK** button to enter and press ▼ / ▲ button to choose.

Common Interface

Note: The Common Interface Menu only display after CI card inserted.

Press ▼ / ▲ / ◀ / ▶ button to select **Common Interface**, then press **OK** button to enter and press ▼ / ▲ button to choose.

Press ▼ / ▲ / ◀ / ▶ button to select the options, then press **OK** button to see the detailed information of the CI card.

Press **MENU** button on the front of panel or **MENU** on the remote control to display the main menu.


Press ◀ / ▶ button to select **Others** in the main menu, then press **OK** or button to enter.

Notes:

- 1.Video / Audio / Time menu and description are the same with the **ATV source**.
- 2.Others menu and description are the same with the **ATV source**.

USB Source

Press **SOURCE** button on the remote control, then press ▼ / ▲ button to select **USB** and press **OK** or ▼ button to enter.

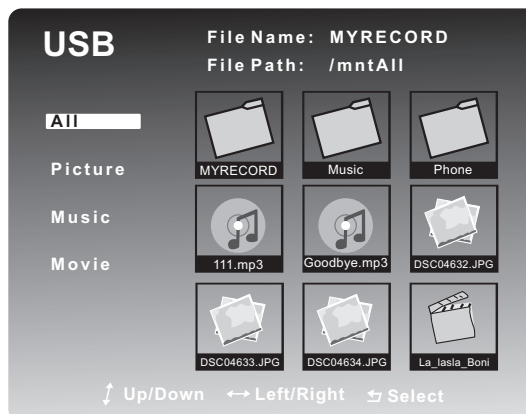

Picture

Press ▼ / ▲ button to select **Picture** and press **OK** button to show all folders and the picture document.

Press ▼ / ▲ / ◀ / ▶ button to choose some picture demonstration

Press **OK** button demonstration

Press ◀ / ▶ button to select **⏮**, then press **OK** button to view the previous picture.

Press ◀ / ▶ button to select **⏭**, then press **OK** button to view the next picture.

Press ◀ / ▶ button to select **C**, then press **OK** button clockwise rotating the picture.

Press ◀ / ▶ button to select **O**, then press **OK** button anti-clockwise rotating the picture.

Press ◀ / ▶ button to select **⌂**, then press **OK** button the menu will appear Press ▼ / ▲ button to select **Repeat**, then Press ◀ / ▶ button select On or Off. This clause uses in establishing whether to circulate the broadcast picture.

Press ▼ / ▲ button to select **Shuffle**, then press ◀ / ▶ button select On or Off. This clause uses in establishing the picture to broad-cast stochastically.


PVR

Instant Recorder


Note: Make sure you have inserted the USB device to the TV board before you start to do the recording, only working for digital TV.

Press RECORD button on your remote control to start record whenever you want to start.

The LED will keep blue and there will be a recording icon on the left top of the display screen during recording:




Press RECORD button again to set the Duration time of recording, to select the hour and minute, press ▼ / ▲ button to set the number. Press ◀ button to confirm your record time setting and back to the previous operation.

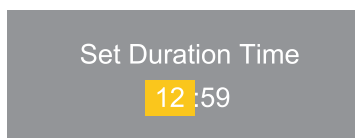

It will stop recording when have recorded for the Duration Time.

Press STOP button on your remote control to stop recording, there will be a dialog as follows:

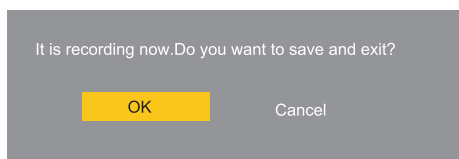

press ◀ / ▶ button to select OK(to exit) or Cancel(continue recording), press OK button on your remote control to confirm your choose.

Note: During recording, you can not callout Input Source, Menu, Text, EPG, MHEG, FAV List and so on unless you stop RECORD first.


Press POWER button to enter the standby mode, the recording is continue backstage.

During recording, you can't change the channel unless you stop recording first;


The PVR function doesn't support recording Subtitle, Radio Channel and locked channel.

PVR Timer

Press MENU button on the front of panel or MENU on the remote control to display the main menu.
Press ◀ / ▶ button to select Time in the main menu, then press OK button or to enter.

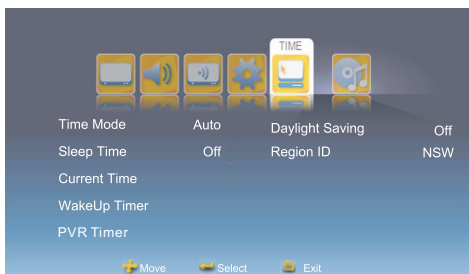

1. Press ▼ / ▲ button to select PVR Timer.
2. Press OK button to enter and press ▼ / ▲ button to edit.
3. After finishing your adjustment, Press Menu or EXIT button to save and back to the previous menu.

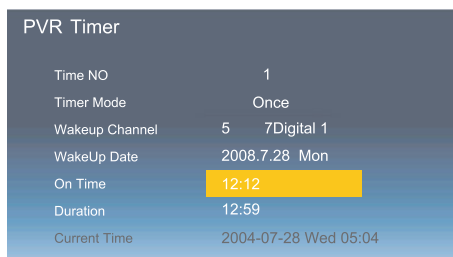

Timer NO

Press ▼ / ▲ button to select Time NO, then press OK button to enter and press ▼ / ▲ button to select Timer NO, you can set 8 different PVR WakeUp Timers in all.

Timer Mode

Press ▼ / ▲ button to select Timer Mode, then press OK button to enter and press ▼ / ▲ button to select Off, Once, Daily or Weekly.

Note: You can not set the following options if you set the Timer Mode "Off".

Wakeup Channel

Press ▼ / ▲ button to select Wakeup Channel, then press OK button to enter the Channel List and press ▼ / ▲ button to select the program which you want to record.

Wakeup Date

Press ▼ / ▲ button to select Wakeup Date, then press ◀ / ▶ button to select the year, month and day, press ▼ / ▲ button to set the number.

Press ◀ button to confirm your date setting and back to the previous operation.

On Time

Press ▼ / ▲ button to select On Time, then to select the minute and second, press ▼ / ▲ button to set the number.

Press ◀ button to confirm your start record time setting and back to the previous operation.

Duration

Press ▼ / ▲ button to select Duration, press ◀ / ▶ button to select the hour and minute, press ▼ / ▲ button to set the number.

Press ◀ button to confirm your record time setting and back to the previous operation.

EPG Timer for PVR

Press ▼ / ▲ / ◀ / ▶ button to select EPG, then press OK button to enter.



The current program' s channel No. and channel name.

The current program' s name.

The current program' s broadcast date and start-stop time.

Press ▼ / ▲ / ◀ / ▶ button to select program, then press Red button to wakeup record, there will be a iron right of the program's name.

Note:You can't record the program which have been played

Timeshift

Press Timeshift button on your remote control to start Timeshift, the scene will stop,you can see a dialog as f ollows a few seconds later:

Playback Available

Then you can press Timeshift button again to play the program.

Press OK button to callout the control bar in the bottom of the screen as follows:


The time have played

Free space and available timeshift time of your USB

The time have timeshifted



Press Stop button on your remote control or on the control bar in the bottom of the the screen to stop Timeshift,there will be a dialog as follows:

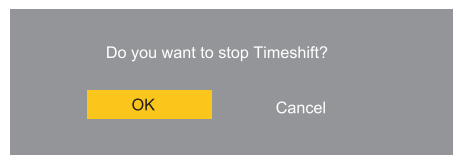

Press OK to stop Timeshift and press Cancel to continue Timeshift.

Press Fastforward button to fastforward and press Fastback to fastback the play.

Note: During Timeshift,you can not callout Input Source, Menu,Text,EPG,MHEG ,FAV List and so on unless you stop it first.

Press POWER button will stop the Timeshift;

During recording,you can't change the channel unless you stop it first;

The Timeshift function doesn't support Timeshift Radio Channel and locked channel.

Troubleshooting Tips

Before calling for service, you can check the following items on symptoms and solutions.

No picture:

Check other channel, maybe station problem.
Adjust the tuning control.
Ensure that the input setting is at TV state.
Ensure that the LCD is on.
Ensure that the equipment is connected properly.

No sound and distorted sound:

Ensure that the input settings for the TV and sound are proper.
Adjust the tuning control.
Probably local interference, such as an appliance.
Re-orient aerial(if indoor type).
Ensure that the equipment is connected properly.

No remote Control:

Check the battery are installed with the correct polarity.
Point the remote control unit at the remote control sensor and operate.
Remove the obstacles between the remote control and the remote control sensor.
Operate the remote control unit at a distance of not more than 8 meters from the remote control sensor.

NO SIGNAL displayed (PC mode)

Check if the wire is connected correctly.
Ensure the computer or other equipments are at power on mode.
Ensure the TV input setting is at pc mode.

INVALID FORMAT displayed (PC mode)

Check if the input setting is compatible to the monitor specification.

Led lamp indicator on but no picture

Check the monitor setting :contrast ,brightness.
Check if the wire is connected correctly.

Some unusual spots on screen:

Some dot defects may appear on the screen, like red, green or blue, Spots, However, this will have no impact or effect on the monitor performance.

Lost password:

On the password screen , enter the following master password: 4886
You may use the master password to set a new password as desired .
Please remember your password and keep it carefully.



Electric and electronic equipment and included batteries contains materials, components and substances that can be hazardous to your health and the environment, if the waste material (discarded electric and electronic equipment and batteries) is not handled correctly.

Electric and electronic equipment and batteries is marked with the crossed out trash can symbol, seen below. This symbol signifies that electric and electronic equipment and batteries should not be disposed of with other household waste, but should be disposed of separately.

As the end user it is important that you submit your used batteries to the appropriate and designated facility. In this manner you make sure that the batteries are recycled in accordance with legislature and will not harm the environment.

All cities have established collection points, where electric and electronic equipment and batteries can either be submitted free of charge at recycling stations and other collection sites, or be collected from the households. Additional information is available at the technical department of your city.